


Installation Guidance

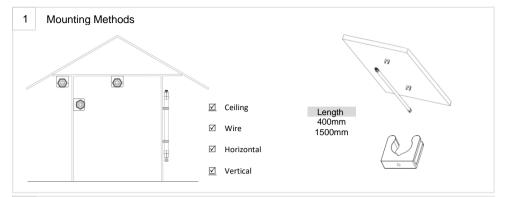

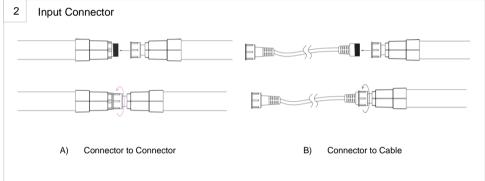

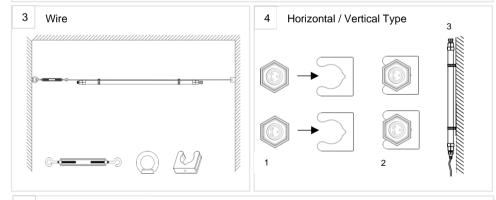

- 5 Remarks
 - Be sure to fix the luminaire in brackets and <u>tighten</u> the connectors and caps properly to avoid short circuit.
 - Refer to the label on the luminaire for technical specifications.
 - IMPORTANT! Always make sure to end the series with an end cap, to seal the female plug.




USER'S MANUAL

Farm-Light





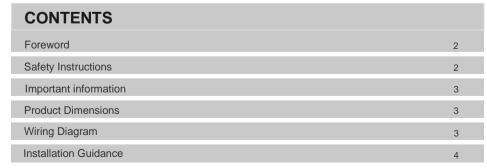

Foreword

Thanks for choosing our LED Farm-Light. We strongly recommend you to read this manual carefully before installation. Make sure you have understood the assembly instructions correctly, to ensure the right performance of our Farm-Light.

- * Kontakt venligst RN Solutions ApS, hvis du ønsker brugermanualen på Dansk.
- * Vänligen kontakta RN Solutions APS, om du önskar manualen på Svenska.
- * Bitte kontaktieren Sie RN Solutions ApS, wenn Sie das Handbuch auf Deutsch verwenden möchten.

RN Solutions ApS

Phone +45 9838 5995

E-mail: info@rnsolutions.dk

Safety Instructions

In order to ensure product stability and a safe application, please kindly follow the instructions:

- Before opening the package, please check if there has been damage or defect during transportation, if damage occurs, please do not use it and inform your supplier immediately.
- 2. Should the product be found damaged in any way, please do not unpack and contact your supplier in time.
- 3. Please do not attempt to use a damaged product.
- 4. The product should be installed, dismantled, and maintained only by a qualified electrician. This manual prohibits all mishandling of the supplied products and accessories like e.g., wrong installation etc.
 - DISCLAIMER: Suppliers do not take responsibility for any problems or damages that occurs due to mishandling the product.
- 5. Always make sure to turn the male plug against the power supply.
- 6. Always make sure to end the series with an end cap, to seal the female plug.
- 7. The luminaires can be jet-washed with water and soap (IP69K). Be sure <u>not</u> to use any sandpaper, polishing powder or alcohol, dissolvents, and similar liquids.
- 8. Do not connect the cables while the luminaire is powered on.

This manual applies to this specific product only.

For more information, please contact your supplier.

Important information

- This product is only compatible with RNS Plug N Play system Plug 3 and RNS Accessories.
- Make sure to *gently* CLICK the luminaire in the brackets, to ensure no damages on the luminaire.
- 3. Maximum 1500W, connected in one line/series

Product Dimension (mm) Female



33mm

0.4M /1.5M

ITEM	SIZE	POWER	In-Rush & Time	Leakage Current
AFDV040_10P	400mm	10W	2A, 10μs	0.35mA
AF150_25P	1500mm	25W	9.2A, 4µs	0.35mA
AFDV150_25P	1500mm	25W	2.4A, 10µs	0.35mA
AFD150_36P	1500mm	36W	4.2A, 10μs	0.35mA

Wiring Diagram



Serial Link

