


Installation Guidance

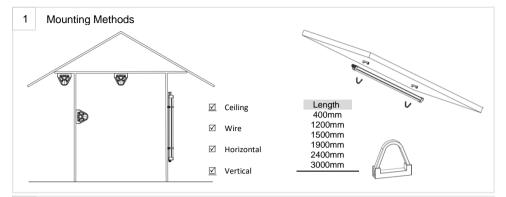

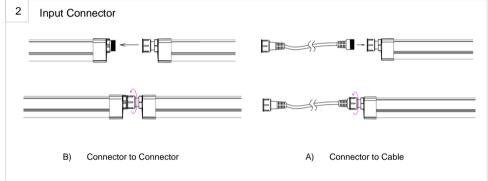

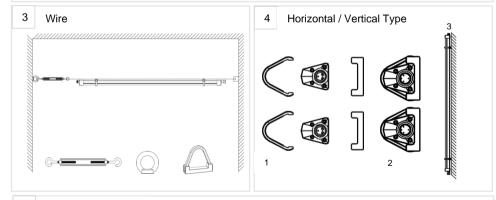

- 5 Remarks
 - Be sure to fix the luminaire in brackets and <u>tighten</u> the connectors properly to avoid short circuit.
 - Refer to the label on the luminaire for technical specifications.
 - IMPORTANT! Always make sure to end the series with an end cap, to seal the female plug.



USER'S MANUAL

Modular-Light





CONTENTS	
Foreword	2
Safety Instructions	2
Important information	3
Product Dimensions	3
Wiring Diagram	3
Installation Guidance	4

Foreword

Thanks for choosing our LED Modular-Light. We strongly recommend you read this manual carefully before installation. Make sure you have understood the assembly instructions correctly, to ensure the right performance of our Modular-Light.

- * Kontakt venligst RN Solutions ApS, hvis du ønsker brugermanualen på Dansk.
- * Vänligen kontakta RN Solutions APS, om du önskar manualen på Svenska.
- * Bitte kontaktieren Sie RN Solutions ApS, wenn Sie das Handbuch auf Deutsch verwenden möchten.

RN Solutions ApS

Phone +45 9838 5995

E-mail: info@rnsolutions.dk

Safety Instructions

To ensure product stability and a safe application, please kindly follow these instructions:

 
- Before opening the package, please check if there has been damage or defect during transportation, if damage occurs, please do not use it, and inform your supplier immediately.
- 2. Should the product be found damaged in any way, please do not unpack, and contact your supplier in time.
- 3. Please do not attempt to use a damaged product.
- 4. The product should be installed, dismantled, and maintained only by a qualified electrician. This manual prohibits all mishandling of the supplied products and accessories like e.g., wrong installation etc.
 - **DISCLAIMER**: Suppliers do not take responsibility for any problems or damages that occurs due to mishandling the product.
- 5. Always make sure to turn the male plug against the power supply.
- 6. Always make sure to end the series with an end cap, to seal the female plug.
- μs The luminaires can be jet-washed with water and soap (IP69K). Be sure not to
 use any sandpaper, polishing powder or alcohol, dissolvents, and similar liquids.
- 8. Do not connect the cables while the luminaire is powered on.

This manual applies to this specific product only.

For more information, please contact your supplier.

Important information

- This product is only compatible with RNS Plug N Play system Plug 3 and RNS Accessories.
- Make sure to *gently* CLICK the luminaire in the brackets, to ensure no damages on the luminaire.
- 3. Maximum 1500W, connected in one line/series.



ITEM	Size	Power (W)	In-rush & time	Leakage current
AMD040C10P	400mm	10W	2A, 10µs	0.4mA
AMD120_18P AMD150_25P AMD190_30P	1200mm 1500mm 1900mm	18W 25W 30W	2.4A, 10 μs	0.4mA
AMDV150_36P AMD240_36P AMDV300_36P	1500mm 2400mm 3000mm	36W	4.2A, 10μs	0.4mA
AMD300_72P	3000mm	72W	8.4A, 10µs	0.8mA

